

Alarm Mode Selection:

Turn the alarm on.
Connect a sensor pad **with weight applied!** If weight is not placed on pad, mode selection will not change from present setting.

Open the selection door to display the option buttons.



Press the “MODE” Selection button until the LED light flashes Green above the mode you would like to use on the front panel.

